

# KIRA TECH TIP

## Inch to Metric Mode

When changing between inch and metric mode, be at the machine reference position on all axes

Change By:

G20/G21

or

Setting Page INI=1 or 0

**Do NOT change #1001 b0 INM=1**

This technical bulletin is provided as a free service by Shoprag.com