

KIRA TECH TIP

Overtravel Alarm On All Axes

If all axes have plus and minus
hardware travel alarms:

Check Parameters:

#3004 b5 OTW=1

Kira machines have absolute encoders and do
not use limit switches on the axes